


Leica 3D Disto

Quick Start

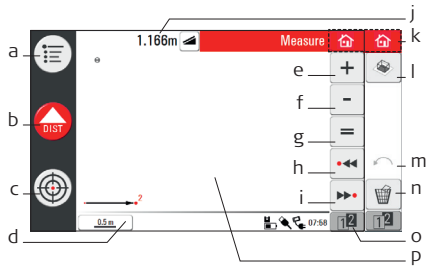


- a) Menu
- b) DIST
- c) Viewfinder
- d) Zoom Function
- e) Add
- f) Subtract
- g) Get Result/Close Polygon
- h) Go selection backward
- i) Go selection forward
- j) Result Window with Result Key
- k) Save or close operation
- l) Area / Volume
- m) Undo/ Redo
- n) Clear
- o) Switch between 1st and 2nd Tool bar
- p) Sketch Area



- when it has to be **right**

Leica
Geosystems

Setup

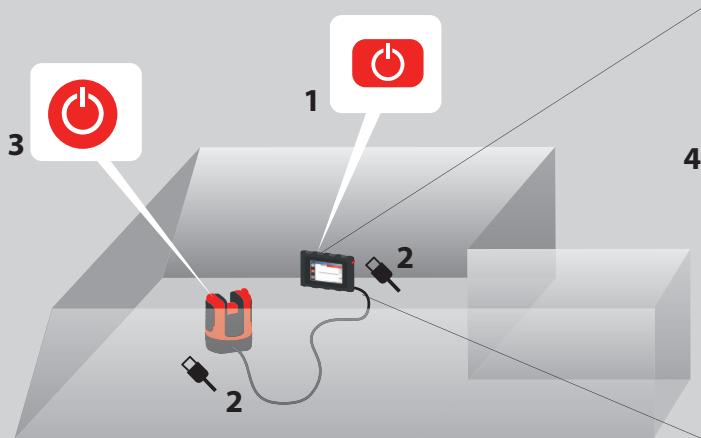



Viewfinder




1




2

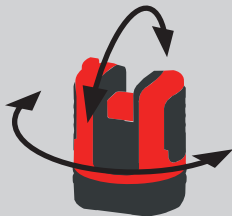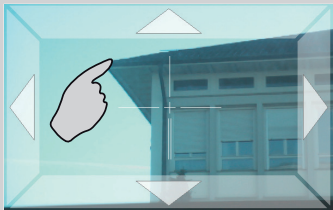



3a

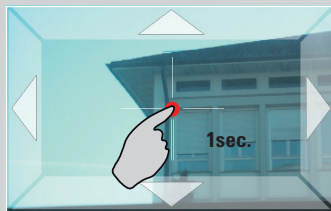




3b

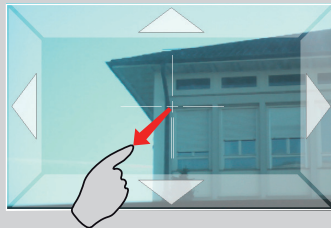




Measure

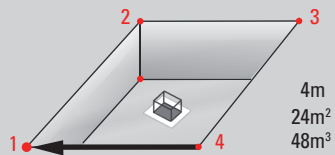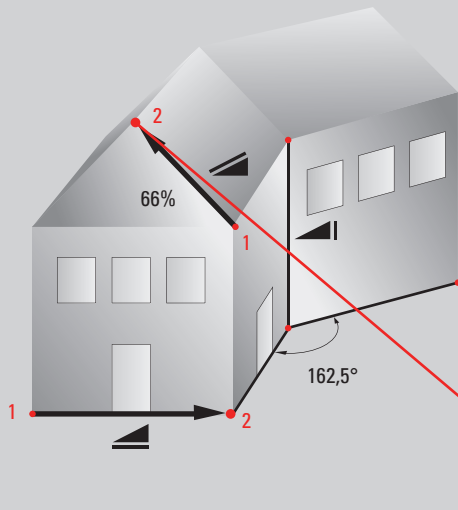

Measure

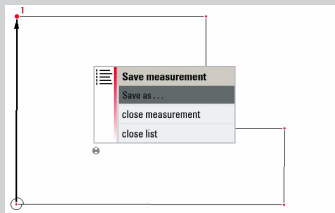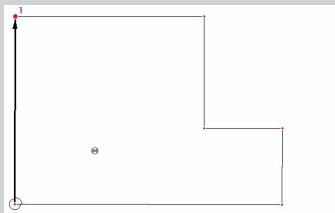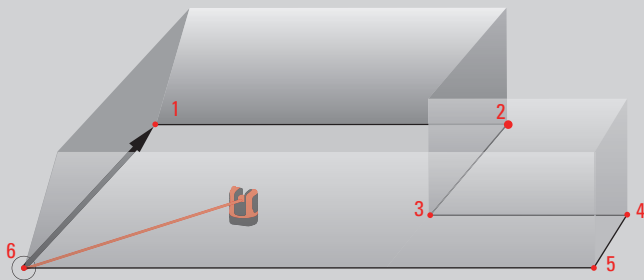

Measure $\oplus/\ominus$

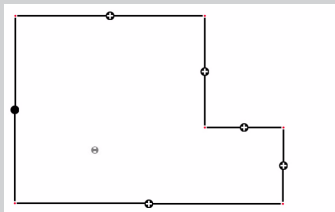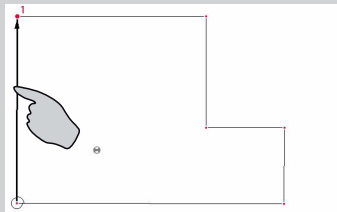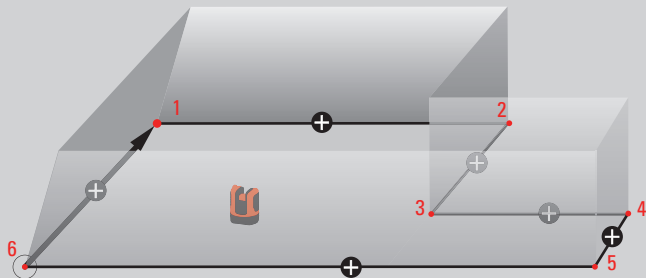

Measure



6



1



6






5...



1



2

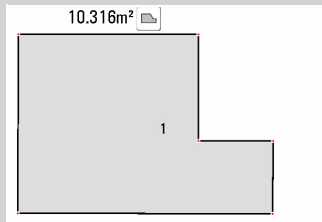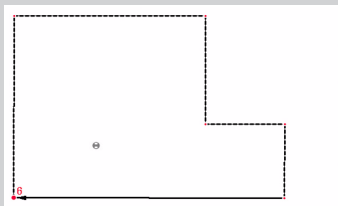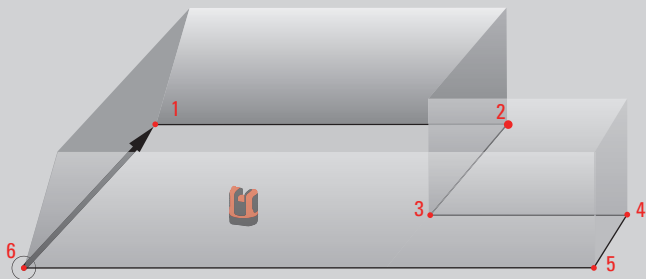

Tool Kit




2.000 m

OK

0.500 m

OK

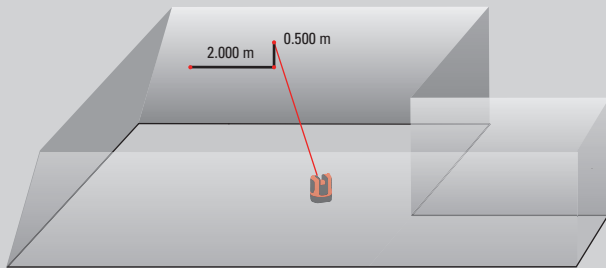

Applications...

Tool Kit

File manager

Room Scan

Calculator

 
Projector

Device...



Location...

Settings...




Power off



Tool Kit

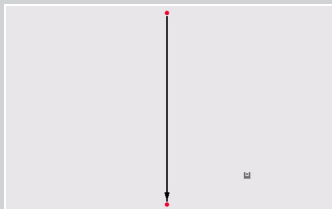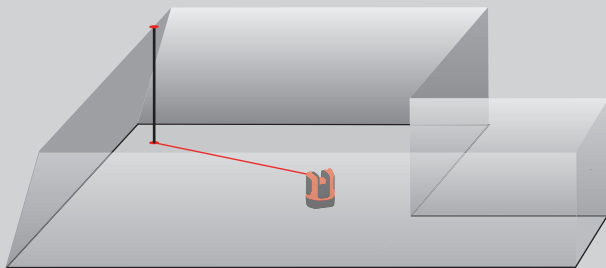

Room Scan

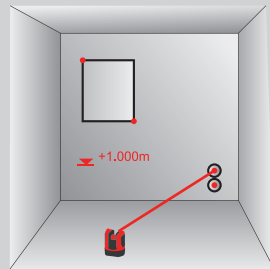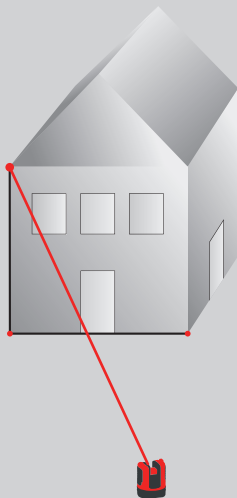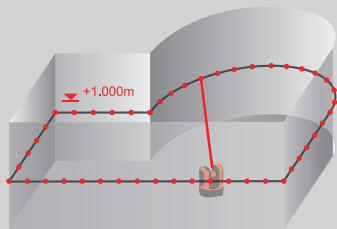


Room Scan



1cm.....50cm

OK

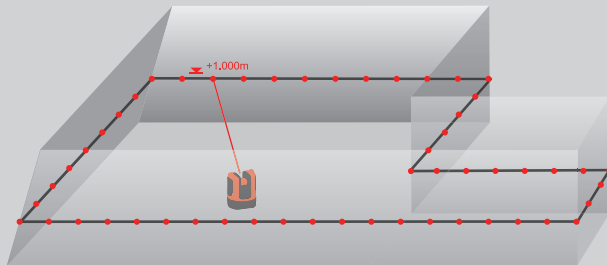

Applications...

Tool Kit

File manager

Room Scan

Calculator

Projector


Device...

Location...

Settings...

Power off

+0.000m

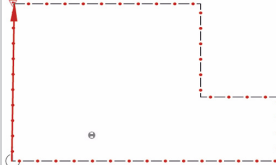



2

2sec.

1,2,3...OK



3



A

2sec.


Yes



Transform into rectangle?



Yes

No

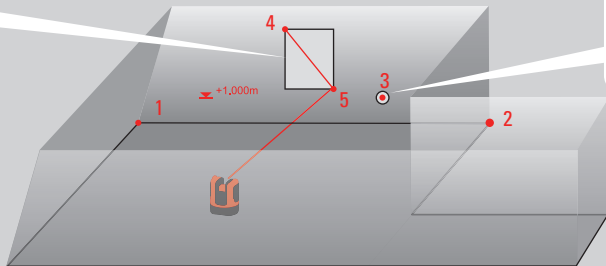

2sec.

Ø0.2m

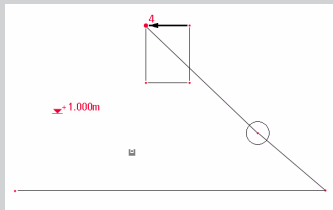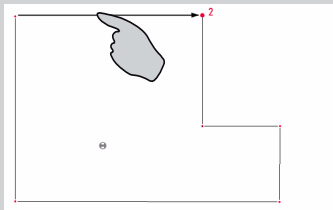

Room Scan



Yes




3...5x

OK



3...5x

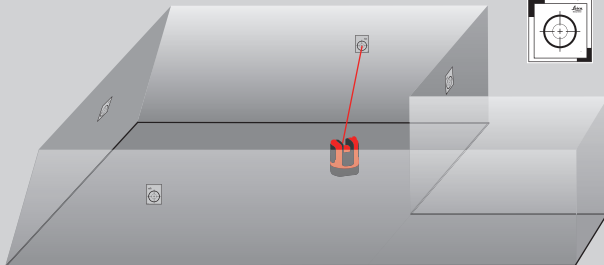

Applications...

File manager

Calculator

Device...

Settings...

Quit

Tool Kit

Room Scan



Projector

Location...

Secure location

Relocate

Check location

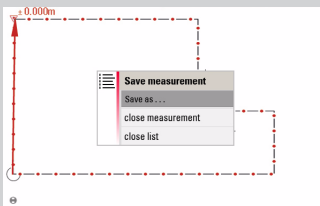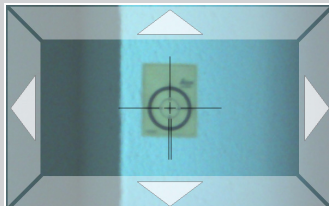

Room Scan



0.5 cm 10.0 cm


OK



3...5x



3...5x

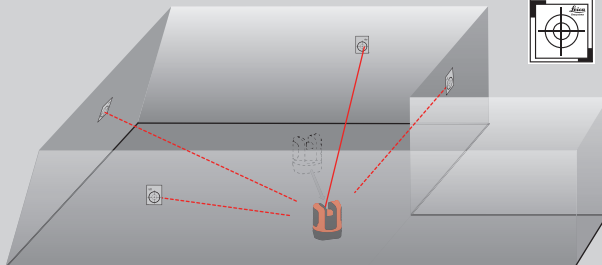

Applications...

File manager

Calculator

Device...

Settings...

Power off

Tool Kit

Room Scan

Projector

Location...

Secure location

Relocate

Check location

Select Secure Point:

SecurePoints\101014_SP_0040



101014_SP_0040




101014_SP_0041




101014_SP_0042




101014_SP_0043

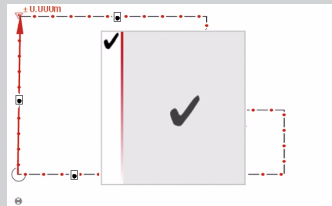

Projector

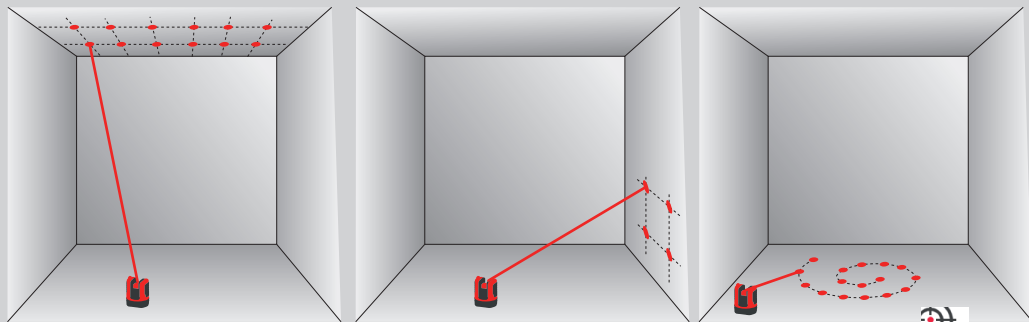

Projector

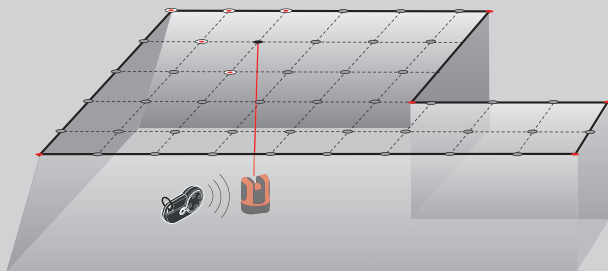

Applications...

File manager

Calculator

Device...

Settings...

Power off

Tool Kit

Room Scan

Projector


Location...

Enter column space: ++ (m):


1.00

1	2	ABC	
4	5	DEF	
7	8	GHI	
0	0	JKL	
0	0	MNO	
0	0	PQRS	
0	0	TUV	
0	0	WXYZ	


OK

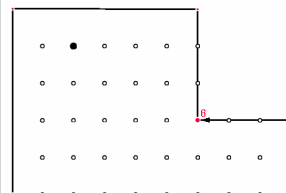

File Manager

 

Yes

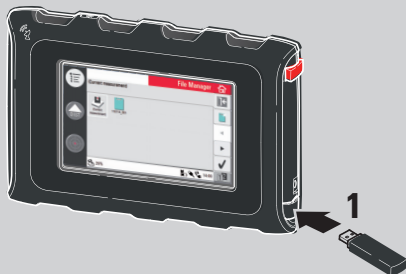

Applications...

File Manager

Calculator

Device...

Settings...

Power off

101014_001



(current measurement)



marker_002



101012_003



101012_002



101014_001

101014_001



(current measurement)



mark:



101014_001

Export to Mass Storage Device?

OK

Cancel



Laser class 2 product in
accordance with
IEC 60825-1

Leica Geosystems AG

Heinrich-Wild-Strasse
CH-9435 Heerbrugg
Switzerland
Phone +41 71 727 31 31

www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems

780999-1.1.0en

Original text
© 2011 Leica Geosystems AG, Heerbrugg, Switzerland